


# RESIDENTIAL STORAGE SYSTEMS

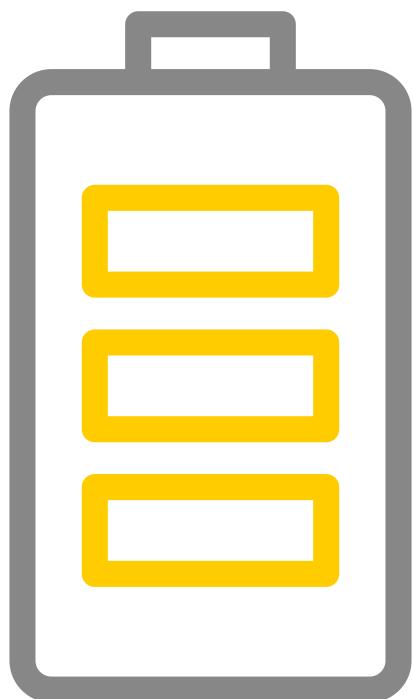

RESIDENTIAL  
EMOBILITY  
MOUNTING

**krannich**

Inverter manufacturer



<b>Storage inverter type</b>	AXIhycon 5 / 6 / 8 / 10 H	AXIhycon 12 / 15 / 20 H	AXIhycon 29.9 / 40 / 50 H
<b>Max. PV system size (kWp)</b>	DC: 8.0 to 16.0 AC: without restriction	DC: 19.2 to 32.0 AC: without restriction	DC: up to 41.86 AC: without restriction
<b>AC phases</b>	<b>1</b>	<input type="radio"/>	
	<b>3</b>	<input checked="" type="radio"/>	
<b>Surge Protection Device DC / AC</b>	Type 2 / -		
<b>Bat.-coupling</b>	<b>AC (Bat.-Inv)</b>	<input checked="" type="radio"/>	
	<b>DC (Hybrid)</b>	<input checked="" type="radio"/>	
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		<input checked="" type="radio"/>	
<b>Manufacturer storage</b>			
<b>Storage type</b>	AXIstorage Li SV1 10.1 to 23.6		AXIstorage Li SV3 9.7 to 34
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>	3 - 7 / 6		2 to 7 / -
<b>Max. charging power System</b>	to be calculated depending on the set / table		
<b>Usable capacity (kWh) per unit</b>	10,1 to 23,6		9,7 to 34,0
<b>Time window for expansion from commissioning</b>	Up to 5 years		
<b>Emergency power (separate AC clamp)</b>	<input checked="" type="radio"/> backup connection		
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>	<input checked="" type="radio"/> backup connection		
<b>Full battery backup (automatic transfer switch)</b>	<input type="radio"/>		
<b>Active PV-modules in backup mode</b>	<input checked="" type="radio"/>		
<b>Interfaces (Heat pump + FRE)</b>	Connection FRE and heat pump via DRM interfaces		
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>	Fixed charging times; dynamic electricity tariffs (FW update coming soon); Limitation by EVU (currently via ext.EMS, soon via integrated DRM contact)		
<b>System information</b>	3-phase DC coupled storage system; Power classes up to 10kW with 2 MPPT - 12 / 15 / 20 / 40 / 50 kW with 4 MPPT - 29.9 kW with 3 MPPT; UPS functionality (<10ms); integrated arc detection; peak shaving; up to 3 devices in parallel operation (only same inverter performance classes and battery sizes, EPS outputs not synchronized); use of hybrid as offgrid system (with / without generator) possible; control for external NA protection possible		

\*In Germany limited to 4.6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability / Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

Inverter manufacturer



<b>Storage inverter type</b>		Enphase Microinverter
<b>Max. PV system size (kWp)</b>		AC: without restriction
<b>AC phases</b>	1	<input checked="" type="radio"/>
	3	<input checked="" type="radio"/>
<b>Surge Protection Device DC / AC</b>		- / -
<b>Bat.-coupling</b>	AC (Bat.-Inv)	<input checked="" type="radio"/>
	DC (Hybrid)	<input type="radio"/>
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		<input checked="" type="radio"/>
<b>Manufacturer storage</b>		
<b>Storage type</b>		Enphase Energy AC Storage System 5P-3P Flex Phase
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		1 / unlimited
<b>Max. charging power System</b>		to be calculated depending on the set / table
<b>Usable capacity (kWh) per unit</b>		5
<b>Time window for expansion from commissioning</b>		Unlimited
<b>Emergency power (separate AC clamp)</b>		<input type="radio"/>
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		<input type="radio"/>
<b>Full battery backup (automatic transfer switch)</b>		<input type="radio"/> (IQ7 series) Announced (IQ8 series)
<b>Active PV-modules in backup mode</b>		<input type="radio"/> (IQ7 series) Announced (IQ8 series)
<b>Interfaces (Heat pump + FRE)</b>		Connection FRE via Envoy-S Gateway
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times; dynamic electricity tariffs; Limitation by EVU (via contact at the gateway)
<b>System information</b>		Module inverter with 1/3-phase AC coupled storage system

Inverter manufacturer



<b>Storage inverter type</b>		PRIMO GEN24 / PRIMO GEN24 Plus 3.0 / 3.6 / 4.0 / 4.6 / 5.0 (not DE) / 6.0 (not DE) / 8.0 (not DE) / 10.0 (not DE)		
<b>Max. PV system size (kWp)</b>		DC: 4.5 to 15.0 AC: without restriction		
<b>AC phases</b>	1		<input checked="" type="radio"/>	
	3		<input type="radio"/>	
<b>Surge Protection Device DC / AC</b>		Type 1+2 opt. /-		
<b>Bat.-coupling</b>	AC (Bat.-Inv)		<input checked="" type="radio"/>	
	DC (Hybrid)		<input checked="" type="radio"/>	
<b>Bat. charging via separate PV inverter (AC-coupling)</b>			<input checked="" type="radio"/>	
<b>Manufacturer storage</b>				
<b>Storage type</b>		B-Box HVS 5.1 to 7.7	B-Box HVM 11 to 19.3	Reserva 6.3 / 9.5
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		2 - 3 / up to 3	4 - 8 / up to 3	2 - 3 / up to 4
<b>Max. charging power System</b>		to be calculated depending on the set / table		to be calculated depending on the set / table
<b>Usable capacity (kWh) per unit</b>		5,1 to 7,7	11,0 to 19,3	6,3 to 9,5
<b>Time window for expansion from commissioning</b>		Unlimited	Unlimited	Up to 2 years
<b>Emergency power (separate AC clamp)</b>		<input checked="" type="radio"/> 1-phase at PV-Point		
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		<input type="radio"/>		
<b>Full battery backup (automatic transfer switch)</b>		<input checked="" type="radio"/> , backup box must be assembled by yourself		
<b>Active PV-modules in backup mode</b>		<input checked="" type="radio"/>		
<b>Interfaces (Heat pump + FRE)</b>		Connection Heat pumpMpe and FRE via 6 x DI / DO contact		
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times; dynamic electricity tariffs (via Smart Meter IP + FW Update); Limitation by EVU (integr.Interface)		
<b>System information</b>		1-phaSiges hybrid device with additional PV inverter via AC coupling Version GEN24 Plus: the GEN24 Plus series is delivered, as usual, with an active battery connection as a hybrid; Version GEN24: the new GEN24 series is delivered with deactivated battery connection; This can be activated with an additional activation code At power classes 5.0 to 10.0 kW by selecting VDE-AR-N 4105 no limit to 4.6 kVA, therefore not usable in DE		

\*In Germany limited to 4.6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability /Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

Inverter manufacturer



<b>Storage inverter type</b>	SYMO GEN24 / SYMO GEN24 Plus 3.0 / 4.0 / 5.0	SYMO GEN24 / SYMO GEN24 Plus 6.0 / 8.0 / 10.0	SYMO GEN24 12.0 SC / SC Plus
<b>Max. PV system size (kWp)</b>	DC: 4.5 to 18.0 AC: without restriction		
<b>AC phases</b>	1	<input type="radio"/>	
	3		<input checked="" type="radio"/>
<b>Surge Protection Device DC / AC</b>	Type 1 + 2 opt. /-		
<b>Bat.- coupling</b>	AC (Bat.-Inv)	<input checked="" type="radio"/>	
	DC (Hybrid)		<input checked="" type="radio"/>
<b>Bat. charging via separate PV inverter (AC-coupling)</b>	<input checked="" type="radio"/>		
<b>Manufacturer storage</b>			
<b>Storage type</b>	B-Box HVS 5.1 to 12.8	B-Box HVM 11.0 to 22.1	Reserva 6.3 / 9.5 / 12.6 / 15.8
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>	2 - 5 / up to 3	4 - 8 / up to 3 (19.3), 2 (22.1)	2 - 5 / up to 4
<b>Max. charging power System</b>	to be calculated depending on the set / table		
<b>Usable capacity (kWh) per unit</b>	5,1 to 12,8	11,0 to 22,1	6,3 to 15,8
<b>Time window for expansion from commissioning</b>	Unlimited		
<b>Emergency power (separate AC clamp)</b>	<input checked="" type="radio"/>		
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>	<input type="radio"/>		
<b>Full battery backup (automatic transfer switch)</b>	<input type="radio"/>	<input checked="" type="radio"/>	with Envitec Backup Box / Fronius BACkup Switch + Controller
<b>Active PV-modules in backup mode</b>	<input checked="" type="radio"/>		
<b>Interfaces (Heat pump + FRE)</b>	Connection Heat pumpMpe and FRE via 6 x DI / DO contact		
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>	Fixed charging times; dynamic electricity tariffs (via Smart Meter IP + FW Update); Limitation by EVU (integr.Interface)		
<b>System information</b>	3-phase hybrid device with high charging performance and zAdditional PV inverter via AC coupling; control for external NA protection possible; Version GEN24 (SC) Plus: the GEN24 Plus series is delivered, as usual, with an active battery connection as a hybrid; Version GEN24 (SC): the new GEN24 series wld delivered with deactivated battery connection; this can be activated with additional activation code		

Inverter manufacturer



Storage inverter type		Verto Plus 15.0 / 17.5 / 20.0 / 25.0 / 30.0 / 33.0		
Max. PV system size (kWp)		DC: 22,5 to 50,0 AC: without restriction		
AC phases	1	<input type="radio"/>		
	3		<input checked="" type="radio"/>	
Surge Protection Device DC / AC		Type 1+2 / Type 2		
Bat.-coupling	AC (Bat.-Inv)		<input checked="" type="radio"/>	
	DC (Hybrid)		<input checked="" type="radio"/>	
Bat. charging via separate PV inverter (AC-coupling)			<input checked="" type="radio"/>	
Manufacturer storage				
Storage type		B-Box HVS 5.1 to 12.8 (Release announced)	B-Box HVM 11.0 to 22.1 (Release announced)	B-Box HVB 5.9 to 29.6 Reserva 6.3 / 9.5 / 12.6 / 15.8
Number of storages per unit (tower) / Max. Units (towers) parallel		2 - 5 / to 3	4 - 8 / To 3 (19.3), 2 (22.1)	2 - 10 / 3 2 - 5 / up to 4
Max. charging power System		to be calculated depending on the set / table		
Usable capacity (kWh) per unit		5,1 to 12,8	11,0 to 22,1	5,94 to 29,69 6,3 to 15,8
Time window for expansion from commissioning		Unlimited		
Emergency power (separate AC clamp)			<input type="radio"/>	
Battery backup light (backup connection inverter, i.n. transfer switch)			<input type="radio"/>	
Full battery backup (automatic transfer switch)			<input checked="" type="radio"/>	, with Fronius Backup Switch + Controller
Active PV-modules in backup mode			<input checked="" type="radio"/>	, with Fronius Backup Switch + Controller
Interfaces (Heat pump + FRE)		Connection Heat pumpMpe and FRE via 6 x DI / DO contact		
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times; dynamic electricity tariffs (via Smart Meter IP + FW Update); Limitation by EVU (integr.Interface)		
System information		3-phase DC-coupled hybrid unit with additional PV inverter via AC coupling; 3 MPPT; control for external NA protection possible;		

\*In Germany limited to 4.6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability /Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

<b>Storage inverter type</b>		GW-EH plus + Hybrid 3600 - 6000*					
<b>Max. PV system size (kWp)</b>		DC: 4,8 to 8,0 (only EH / EH plus +) AC: without restriction					
<b>AC phases</b>	1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
	3	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>		
<b>Surge Protection Device DC / AC</b>		- / -					
<b>Bat.-coupling</b>	AC (Bat.-Inv)	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
	DC (Hybrid)	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>		
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
<b>Manufacturer storage</b>							
<b>Storage type</b>		B-Box HVS 5,1 to 12,8	B-Box HVM 11 to 22,1	Force-H1 10,1 to 23,6	Force-H2 6,7 to 16,9		
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		2 - 5 / up to 3	4 - 8 / up to 3	3 - 7 / 6	2 - 5 / 6		
<b>Max. charging power System</b>		to be calculated depending on the set / table		to be calculated depending on the set / table			
<b>Usable capacity (kWh) per unit</b>		5,1 to 12,8	11,0 to 22,1	10,1 to 23,6	6,7 to 16,9		
<b>Time window for expansion from commissioning</b>		Unlimited		Up to 2 years			
<b>Emergency power (separate AC clamp)</b>		<input checked="" type="radio"/> , backup connection					
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		<input checked="" type="radio"/> , backup connection with UPS functionality					
<b>Full battery backup (automatic transfer switch)</b>		<input type="radio"/>					
<b>Active PV-modules in backup mode</b>		<input checked="" type="radio"/> (only EH / EH plus +)					
<b>Interfaces (Heat pump + FRE)</b>							
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times; dynamic electricity tariffs (via Goodwe HEMS) Limitation by EVU (integrated interface)					
<b>System information</b>		1-phase DC-coupled hybrid device with additional PV inverter via AC coupling; BH series only via AC coupling to suitable PV inverter					

Storage inverter type		GW-EH plus + Hybrid 3600 - 6000*		
Max. PV system size (kWp)		DC: 4,8 to 8,0 (only EH / EH plus +) AC: without restriction		
AC phases	1	<input checked="" type="radio"/>		
	3		<input type="radio"/>	
Surge Protection Device DC / AC		- / -		
Bat.-coupling	AC (Bat.-Inv)	<input checked="" type="radio"/>		
	DC (Hybrid)		<input checked="" type="radio"/>	
Bat. charging via separate PV inverter (AC-coupling)		<input checked="" type="radio"/>		
Manufacturer storage		<b>-AXITEC</b>		<b>GOODWE</b>
Storage type		AXIstorage Li SV1 10,1 to 23,6	AXIstorage Li SV2 6,7 to 16,9	Lynx Home F Plus + LX F6,6 to 13,1-H
Number of storages per unit (tower) / Max. Units (towers) parallel		3 - 7 / 6	2 - 5 / 6	2 - 4 / bis 8
Max. charging power System		to be calculated depending on the set / table		
Usable capacity (kWh) per unit		10,1 to 23,6	6,7 to 16,9	6,55 to 13,1
Time window for expansion from commissioning		Up to 5 years		Up to 2 years
Emergency power (separate AC clamp)		<input checked="" type="radio"/> , backup connection		
Battery backup light (backup connection inverter, i.n. transfer switch)		<input checked="" type="radio"/> , backup connection with UPS functionality		
Full battery backup (automatic transfer switch)		<input type="radio"/>		
Active PV-modules in backup mode		<input checked="" type="radio"/> (only EH / EH plus +)		
Interfaces (Heat pump + FRE)				
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times; dynamic electricity tariffs (via Goodwe HEMS) Limitation by EVU (integrated interface)		
System information		1-phase DC-coupled hybrid device with additional PV inverter via AC coupling; BH series only via AC coupling to suitable PV inverter		

\*In Germany limited to 4,6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability /Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

Inverter manufacturer

**GOODWE**

<b>Storage inverter type</b>		GW ET plus + Hybrid 5KN / 6.5KN / 8KN / 10KN (16A) GW ET-20 G2 Hybrid 6000 / 8000 / 10K / 12K / 15K									
<b>Max. PV system size (kWp)</b>		DC: 6,5 to 13,0 AC: without restriction									
<b>AC phases</b>	1	<input type="radio"/>				<input type="radio"/>					
	3	<input checked="" type="radio"/>				<input type="radio"/>					
<b>Surge Protection Device DC / AC</b>		Type 2 / Type 2									
<b>Bat.-coupling</b>	AC (Bat.-Inv)	<input checked="" type="radio"/>				<input type="radio"/>					
	DC (Hybrid)	<input type="radio"/>				<input checked="" type="radio"/>					
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		<input checked="" type="radio"/>									
<b>Manufacturer storage</b>											
<b>Storage type</b>		B-Box HVS /+ 5,1 to 12,8 (+ only ET-20 G2)	B-Box HVM /+ 11 to 22,1 (+ only ET-20 G2)	Force-H1 13,5 to 23,6	Force-H2 6,7 to 16,9	AXIstorage Li SV1 13,5 to 23,6	AXIstorage Li SV2 6,7 to 16,9				
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		2 - 5 / up to 3	4 - 8 / up to 3	4 - 7 / 6	2 - 5 / 6	4 - 7 / 6	2 - 5 / 6				
<b>Max. charging power System</b>		to be calculated depending on the set / table		to be calculated depending on the set / table		to be calculated depending on the set / table					
<b>Usable capacity (kWh) per unit</b>		5,1 to 12,8	11,0 to 22,1	13,5 to 23,6	6,7 to 16,9	13,5 to 23,6	6,7 to 16,9				
<b>Time window for expansion from commissioning</b>		Unlimited	Unlimited	Up to 2 years		Up to 5 years					
<b>Emergency power (separate AC clamp)</b>		<input checked="" type="radio"/> , backup connection									
<b>Battery backup light</b> (backup connection inverter, i.n. transfer switch)		<input checked="" type="radio"/> , backup connection									
<b>Full battery backup</b> (automatic transfer switch)		<input type="radio"/>									
<b>Active PV-modules in backup mode</b>		<input checked="" type="radio"/> (only ET plus +)									
<b>Interfaces</b> (Heat pump + FRE)		Connection of heat pump via potential-free contact; Connection FRE via connection terminals									
<b>SMART Charging Features</b> <b>Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times; dynamic electricity tariffs (announced - via Goodwe HEMS) Limitation by EVU (integrated interface)									
<b>System information</b>		3-phase DC coupled storage system; Up to 10 devices in parallel operation (hybrid only) (SEC1000S box required, DE+A: all EPS outputs active - not synchronized) *** BT series only via AC coupling to suitable PV inverters									

Storage inverter type		GW ET plus + Hybrid 5K / 6.5K / 8K / 10K GW ET plus + Hybrid 5KN / 6.5KN / 8KN / 10KN (16A)	
Max. PV system size (kWp)		DC: 6,5 to 13,0 AC: without restriction	
AC phases	1	<input type="radio"/>	
	3	<input checked="" type="radio"/>	
Surge Protection Device DC / AC		Type 2 / Type 2	
Bat.-coupling	AC (Bat.-Inv)	<input checked="" type="radio"/>	
	DC (Hybrid)	<input checked="" type="radio"/>	
Bat. charging via separate PV inverter (AC-coupling)		<input checked="" type="radio"/>	
Manufacturer storage		<b>GOODWE</b>	<b>ZYC</b> ENERGY
Storage type		Lynx Home F Plus + LX F6.6 to 16.4-H	Lynx D 5.0 to 40.0
Number of storages per unit (tower) / Max. Units (towers) parallel		2 - 5 / up to 8	1 - 8 / -
Max. charging power System		to be calculated depending on the set / table	
Usable capacity (kWh) per unit		6,55 to 16,38	5,0 to 40,0
Time window for expansion from commissioning		Up to 2 years	Unlimited
Emergency power (separate AC clamp)		<input checked="" type="radio"/>	, backup connection
Battery backup light (backup connection inverter, i.n. transfer switch)		<input checked="" type="radio"/>	, backup connection
Full battery backup (automatic transfer switch)		<input type="radio"/>	
Active PV-modules in backup mode		<input checked="" type="radio"/>	(only ET plus +)
Interfaces (Heat pump + FRE)		Connection of heat pump via potential-free contact; Connection FRE via connection terminals	
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times; dynamic electricity tariffs (announced - via Goodwe HEMS) Limitation by EVU (integrated interface)	
System information		3-phase DC coupled storage system; Up to 10 devices in parallel operation (hybrid only) (SEC1000S box required, DE+A: all EPS outputs active - not synchronized) *** BT series only via AC coupling to suitable PV inverters	

\*In Germany limited to 4,6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability /Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

Inverter manufacturer

**GOODWE**

<b>Storage inverter type</b>		GW ET Hybrid 15K / 20K / 25K / 29.9K						
<b>Max. PV system size (kWp)</b>		DC: 22.5 to 44.85 AC: not possible ***						
<b>AC phases</b>	1	<input type="radio"/>			<input type="radio"/>			
	3	<input checked="" type="radio"/>			<input type="radio"/>			
<b>Surge Protection Device DC / AC</b>		Type 2 / -						
<b>Bat.-coupling</b>	AC (Bat.-Inv)	<input type="radio"/>			<input type="radio"/>			
	DC (Hybrid)	<input type="radio"/>			<input type="radio"/>			
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		<input checked="" type="radio"/>						
<b>Manufacturer storage</b>				<b>GOODWE</b>				
<b>Storage type</b>		B-Box HVS 5.1 to 12.8	B-Box HVM 11.0 to 22.1	SIMPO HV 6.4 to 28.8	Lynx Home F Plus + LX F6.6 to 16.4-H	Lynx D 5.0 to 40.0		
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		2 - 5 / -	4 - 8 / -	2 - 9 / up to 8	2 - 5 / up to 8	1 - 8 / -		
<b>Max. charging power System</b>		to be calculated depending on the set / table		depending on the set / table	to be calculated depending on the set / table			
<b>Usable capacity (kWh) per unit</b>		5,1 to 12,8	11,0 to 22,1	6,4 to 28,8	6,55 to 16,38	5,0 to 40,0		
<b>Time window for expansion from commissioning</b>		Unlimited		Unlimited	Up to 2 years	Unlimited		
<b>Emergency power (separate AC clamp)</b>		<input checked="" type="radio"/> , backup connection						
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		<input checked="" type="radio"/> , backup connection with UPS functionality						
<b>Full battery backup (automatic transfer switch)</b>		<input type="radio"/>						
<b>Active PV-modules in backup mode</b>		<input checked="" type="radio"/>						
<b>Interfaces (Heat pump + FRE)</b>		Connection heat pump via SG-Ready contact; Connection FRE via DRM connection						
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times; Dynamic electricity tariffs (announced - via Goodwe HEMS)						
<b>System information</b>		3-phase DC coupled storage system; 3-fold cascade; no logger connection of PV-WR possible; UPS functionality (<10ms); Peak-Shaving; Version 15K + 20K with 2 MPPT and 1 x battery; 25K + 29.9K with 3 MPPT and 2 x battery connection; High DC input currents with 15A / string; high charging currents with up to 2 x 50 A (Version 25K + 29.9K); optional with AFCI						

## Inverter manufacturer



Storage inverter type		SUN2000-2 / 3 / 3.68 / 4 / 4.6 / 5* / 6* KT-L1	SUN2000-3 / 4 / 5 / 6 / 8 / 10 KTL-M1 SUN2000 5 / 6 / 8 / 10 / 12 K MAP0	SUN2000-12 / 15 / 17 / 20 / 25K-MBO	
Max. PV system size (kWp)		DC: 3,0 to 9,0 AC: without restriction	DC: 4,5 to 22,0 AC: without restriction	DC: 18,0 to 37,5 AC: without restriction	
AC phases	1		●		
	3	○	●	●	
Surge Protection Device DC / AC		Type 2 / Type 2	Type 2 / Type 2	Type 2 / Type 2	
Bat.-coupling	AC (Bat.-Inv)	●	●	●	
	DC (Hybrid)	●	●	●	
Bat. charging via separate PV inverter (AC-coupling)		●	●	●	
Manufacturer storage		HUAWEI	HUAWEI	HUAWEI	
Storage type		LUNA2000-5 / 10 / 15-S0	LUNA2000-7 / -14 / -21-S1	LUNA2000-5 / 10 / 15-S0	LUNA2000-7 / -14 / -21-S1
Number of storages per unit (tower) / Max. Units (towers) parallel		1 - 3 / up to 2	1 - 3 / up to 2	1 - 3 / up to 2	1 - 3 / up to 2
Max. charging power System		to be calculated depending on the set / table		to be calculated depending on the set / table	
Usable capacity (kWh) per unit		5,0 to 15,0	7,0 to 21,0	5,0 to 15,0	7,0 to 21,0
Time window for expansion from commissioning		Unlimited		Unlimited	
Emergency power (separate AC clamp)		●, 1-phase with Huawei Backup Box-B0	●, M1 with Backup Box-B1(1-ph)MAP0 with Smart Guard-63A-T0 (3-ph)	●, With Smart Guard-63A-T0 (1-ph)	
Battery backup light (backup connection inverter, i.n. transfer switch)		●, 1-phase with Huawei Backup Box-B0	●, M1 with Backup Box-B1(1-ph)MAP0 with Smart Guard-63A-T0 (3-ph)	●, With Smart Guard-63A-T0 (1-ph)	
Full battery backup (automatic transfer switch)		○	●, Only MAP0 with Smart Guard-63A-T0 (3-ph)	●, With Smart Guard-63A-T0 (1-ph)	
Active PV-modules in backup mode		●	●		●
Interfaces (Heat pump + FRE)		Connection heat pump (withEMMA) + FRE via Huawei Smart Logger			
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times; dynamic electricity tariffs (with EMMA); Limitation by EVU			
System information		1-phase hybrid device with additional PV inverter via AC coupling; optional use of the Huawei Optimizer possible; use as off-grid system without mains connection possible	3-phase DC coupled system;Optional use of the Huawei Optimizer possible; Up to 3 devices in parallel operation ***; Replacement power operation M1 series only 1-phase with backup box-B1; Replacement power operation MAP0 series 3-phase with Smart Guard-63A-T0 Box	3-phase hybrid device withAdditional PV inverter via AC coupling; optional use of the Huawei Optimizer possible; 2 separate battery connections; arc detection	

\*In Germany limited to 4,6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability /Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

Inverter manufacturer



Storage inverter type		Hybrid NH3 M3 8.0 / 10.0 / 12.0			
Max. PV system size (kWp)		DC: 16,0 to 24,0 kWp AC: without restriction			
AC phases	1	<input type="radio"/>			
	3	<input checked="" type="radio"/>			
Surge Protection Device DC / AC		Type 2 / -			
Bat.-coupling	AC (Bat.-Inv)	<input checked="" type="radio"/>			
	DC (Hybrid)	<input checked="" type="radio"/>			
Bat. charging via separate PV inverter (AC-coupling)		<input checked="" type="radio"/>			
Manufacturer storage					
Storage type		B-Box HVS 5.1 to 12.8	B-Box HVM 8.3 to 22.1	AXIstorage Li SV1 10.1 to 23.6	AXIstorage Li SV2 6.7 to 16.9
Number of storages per unit (tower) / Max. Units (towers) parallel		2 - 5 / up to 3	3 - 8 / up to 3	3 - 7 / 6	2 - 5 / 6
Max. charging power System		to be calculated depending on the set / table		to be calculated depending on the set / table	
Usable capacity (kWh) per unit		5,1 to 12,8	8,3 to 22,1	10,1 to 23,6	6,7 to 16,9
Time window for expansion from commissioning		Unlimited		Up to 5 years	Up to 2 years
Emergency power (separate AC clamp)		<input checked="" type="radio"/> , backup connection			
Battery backup light (backup connection inverter, i.n. transfer switch)		<input checked="" type="radio"/> , backup connection			
Full battery backup (automatic transfer switch)		<input checked="" type="radio"/> , with Kaco replacement power box			
Active PV-modules in backup mode		<input checked="" type="radio"/>			
Interfaces (Heat pump + FRE)		Connection FRE via connection terminals			
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times; dynamic electricity tariffs (via Kaco Leaflet HEMS); Limitation by EVU (via Kaco Leaflet HEMS)			
System information		3-phase DC-coupled hybrid device with additional PV inverter via AC coupling; 3 independent MPP trackers; can also be used as a pure memory WR; Up to 3 devices in parallel operation (only the same inverter power classes and battery sizes, EPS outputs not synchronized)			

## Inverter manufacturer



Storage inverter type		Plenticore Plus G2 3.0 / 4.2 / 5.5 / 7.0 / 8.5 / 10 (Plenticore Plus 3.0 with BYD HVM only 11.0) Plenticore BI 5.5 / 26 and 10 / 26 - G2	Plenticore MP G3 S/M (Performance depending on version and activation level)	Plenticore G3S / M / L (Power depending on version and activation level of 4.0 - 20.0 kW)
Max. PV system size (kWp)		DC: 4,5 to 15,0 (only Hybrid) AC: without restriction	DC: 4,5 to 10,5 (depending on activation level) AC: without restriction	DC: 6,0 to 30,0 (depending on activation level) AC: without restriction
AC phases	1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
	3	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Surge Protection Device DC / AC		- / -	Type 2 (opt.) / -	Type 2 (opt.) / -
Bat.-coupling	AC (Bat.-Inv)	<input checked="" type="radio"/> (only BI)	<input checked="" type="radio"/> (act. storage connection)	<input checked="" type="radio"/> (with activated storage connection)
	DC (Hybrid)	<input checked="" type="radio"/> (only Hybrid)	<input checked="" type="radio"/> (act. storage connection)	<input checked="" type="radio"/> (with activated storage connection)
Bat. charging via separate PV inverter (AC-coupling)				
Manufacturer storage		<b>-AXITEC</b>		 <b>PYLONTECH</b>
Storage type		AXIstorage Li SV1 10.1 to 23.6	AXIstorage Li SV2 6.7 to 16.9	Force-H1 10.1 to 23.6 Force-H2 6.7 to 16.9 Force-H39.7 to 34
Number of storages per unit (tower) / Max. Units (towers) parallel		3 - 7 / 6	2 - 5 / 6	3 - 7 / 6 2 - 5 / 6 2 - 7 / 6
Max. charging power System		to be calculated depending on the set / table		to be calculated depending on the set / table
Usable capacity (kWh) per unit		10,1 to 23,6	6,7 to 16,9	10,1 to 23,6 6,7 to 16,9 9,69 to 34,01
Time window for expansion from commissioning		Up to 5 years		Up to 2 years
Emergency power (separate AC clamp)		<input type="radio"/>		<input type="radio"/>
Battery backup light (backup connection inverter, i.n. transfer switch)		<input type="radio"/>		<input type="radio"/>
Full battery backup (automatic transfer switch)		<input type="radio"/>		<input checked="" type="radio"/> , manually with Kostal Backup Switch
Active PV-modules in backup mode		<input type="radio"/>		<input checked="" type="radio"/>
Interfaces (Heat pump + FRE)		Connection heat pump via SG Ready contact; Connection FRE via connection terminals		Connection heat pump via SG Ready contact; Connection FRE via connection terminals
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times; Dynamic electricity tariffs; Limitation by EVU (via KSEM G2)		Fixed charging times; Dynamic electricity tariffs; Limitation by EVU (via KSEM G2)
System information		3-phase AC / DC coupled storage system (hybrid / memory-WR) Plenticore Plus G2: 3-phase PV / hybrid / storage inverter with PV inverter via AC coupling; Battery connection must be activated via activation code;		1-phase AC / DC coupled storage system (hybrid / storage-WR) 2 versions (S / M) with up to 2 additional power levels; FrActivation via activation code (Plenti-Coins); 3-phase PV / hybrid / storage inverter with additional PV inverter via AC coupling; Battery connection must be activated via activation code;

\*In Germany limited to 4.6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability / Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

## Inverter manufacturer

**KOSTAL**  
 Solar Electric

<b>Storage inverter type</b>		Plenticore Plus G2 3.0 / 4.2 / 5.5 / 7.0 / 8.5 / 10 (Plenticore Plus 3.0 with BYD HVM only 11.0) Plenticore BI 5.5 / 26 and 10 / 26 - G2	Plenticore MP G3 S/M (Performance depending on version and activation level)	Plenticore G3S / M / L (Power depending on version and activation level of 4.0 - 20.0 kW)
<b>Max. PV system size (kWp)</b>		DC: 4,5 to 15,0 (only Hybrid) AC: without restriction	DC: 4,5 to 10,5 (depending on activation level) AC: without restriction	DC: 6,0 to 30,0 (depending on activation level) AC: without restriction
<b>AC phases</b>	1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
	3	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
<b>Surge Protection Device DC / AC</b>		- / -	Type 2 (opt.) / -	Type 2 (opt.) / -
<b>Bat.-coupling</b>	AC (Bat.-Inv)	<input checked="" type="radio"/> (only BI)	<input checked="" type="radio"/> (act. storage connection)	<input checked="" type="radio"/> (with activated storage connection)
	DC (Hybrid)	<input checked="" type="radio"/> (only Hybrid)	<input checked="" type="radio"/> (act. storage connection)	<input checked="" type="radio"/> (with activated storage connection)
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		<input type="radio"/>		
<b>Manufacturer storage</b>				 
<b>Storage type</b>		B-Box HVS /+ 5.1 to 12.8	B-Box HVM /+ 11.0 to 22.1	B-Box HVB 5.9 to 29.6
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		2 - 5 / to 3	4 - 8 / to 3	2 - 10 / 3
<b>Max. charging power System</b>		to be calculated depending on the set / table		
<b>Usable capacity (kWh) per unit</b>		5.1 to 12.8	11.0 to 22.1	5.94 to 29.69
<b>Time window for expansion from commissioning</b>		Unlimited		
<b>Emergency power (separate AC clamp)</b>		<input type="radio"/>	<input type="radio"/>	
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		<input type="radio"/>	<input type="radio"/>	
<b>Full battery backup (automatic transfer switch)</b>		<input type="radio"/>	<input checked="" type="radio"/> , manually with Kostal Backup Switch	
<b>Active PV-modules in backup mode</b>		<input type="radio"/>	<input checked="" type="radio"/>	
<b>Interfaces (Heat pump + FRE)</b>		Connection heat pump via SG Ready contact; Connection FRE via connection terminals	Connection heat pump via SG Ready contact; Connection FRE via connection terminals	
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times;Dynamic electricity tariffs; Limitation by EVU (via KSEM G2)	Fixed charging times;Dynamic electricity tariffs; Limitation by EVU (via KSEM G2)	
<b>System information</b>		3-phase AC / DC coupled storage system (hybrid / memory-WR) Plenticore Plus G2; 3-phase PV / hybrid / storage inverter with PV inverter via AC coupling; Battery connection must be activated via activation code;	1-phase AC / DC coupled storage system (hybrid / storage-WR) 2 versions (S / M) with up to 2 additional power levels; FrActivation via activation code (Plenti-Coins);	3-phase AC / DC coupled storage system (hybrid / memory-WR) Plenticore G3: 3 versions (S / M / L) with 2 additional performance levels each; activation via activation code (Plenti-Coins);3-phase PV / hybrid / storage inverter with additional PV inverter via AC coupling; Battery connection must be activated via activation code;

## Inverter manufacturer



Storage inverter type		Sunny Island 4.4M / 6.0H / 8.0H	
Max. PV system size (kWp)		AC: without restriction **	
AC phases	1	<input checked="" type="radio"/>	
	3	<input checked="" type="radio"/>	
Surge Protection Device DC / AC		/	
Bat.-coupling	AC (Bat.-Inv)	<input checked="" type="radio"/>	
	DC (Hybrid)	<input type="radio"/>	
Bat. charging via separate PV inverter (AC-coupling)		<input checked="" type="radio"/>	
Manufacturer storage			
Storage type		B-Box LVS 4.0 to 24.0	B-Box LVL 15.4
Number of storages per unit (tower) / Max. Units (towers) parallel		1 - 6 / up to 16 (16.0)	1 / up to 64
Max. charging power System		to be calculated depending on the set / table	
Usable capacity (kWh) per unit		4,0 to 24,0	15,4
Time window for expansion from commissioning		Unlimited	
Emergency power (separate AC clamp)		<input type="radio"/>	
Battery backup light (backup connection inverter, i.n. transfer switch)		<input type="radio"/>	
Full battery backup (automatic transfer switch)		<input checked="" type="radio"/> , with Enwitec Backup Box (1-/3-phase, 1-phase with phase coupling)	
Active PV-modules in backup mode		<input checked="" type="radio"/> **	
Interfaces (Heat pump + FRE)		Connection FRE depends on the PV-WR	
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times Limitation by EVU (via Home Manager)	
System information		1/3-phase AC coupled storage system with suitable PV inverter; use as a pure offgrid system (PV + generator) possible;	

\*In Germany limited to 4.6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability /Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

## Inverter manufacturer



<b>Storage inverter type</b>		Sunny Boy Smart Energy 3.6 / 4.0 / 5.0* / 6.0*		
<b>Max. PV system size (kWp)</b>		DC: 7,2 to 12,0 AC: without restriction		
<b>AC phases</b>	1			
	3			
<b>Surge Protection Device DC / AC</b>				
<b>Bat.-coupling</b>	AC (Bat.-Inv)			
	DC (Hybrid)			
<b>Bat. charging via separate PV inverter (AC-coupling)</b>				
<b>Manufacturer storage</b>				
<b>Storage type</b>		B-Box HVS 5.1 to 10.2 ***	B-Box HVM 8.3 to 22.1 ***	Home Storage 3.2 to 13.1
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		2 - 4 / up to 3	3 - 8 / up to 3	1 - 4 / -
<b>Max. charging power System</b>		to be calculated depending on the set / table		
<b>Usable capacity (kWh) per unit</b>		5,1 to 10,2	8,3 to 22,1	3,28 to 13,12
<b>Time window for expansion from commissioning</b>		Unlimited		
<b>Emergency power (separate AC clamp)</b>		, PLC / Backup connection		
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		, backup connection (Release is currently still pending)		
<b>Full battery backup (automatic transfer switch)</b>				
<b>Active PV-modules in backup mode</b>				
<b>Interfaces (Heat pump + FRE)</b>		WP via SG Ready Contact		
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times; Dynamic electricity tariffs (via Home Manager 2.0); Limitation by EVU (via Home Manager)		
<b>System information</b>		1-phase DC-coupled hybrid unit with additional PV inverter via AC coupling; 3 MPPT with low input voltage; AFCI integrated; ShadeFix shadow management		

## Inverter manufacturer



Storage inverter type		Sunny Tripower 5.0 / 6.0 / 8.0 / 10.0 Smart Energy		
Max. PV system size (kWp)		DC: 7,5 to 15,0 AC: without restriction		
AC phases	1	<input type="radio"/>		
	3	<input checked="" type="radio"/>		
Surge Protection Device DC / AC		Type 2 / Type 2		
Bat.-coupling	AC (Bat.-Inv)	<input checked="" type="radio"/>		
	DC (Hybrid)	<input checked="" type="radio"/>		
Bat. charging via separate PV inverter (AC-coupling)		<input checked="" type="radio"/>		
Manufacturer storage				
Storage type		B-Box HVS 5.1 to 12.8 ***	B-Box HVM 11 to 22.1 ***	Home Storage 6.5 to 16.4 VARTA.wall 10.0 / 15.0 / 20.0
Number of storages per unit (tower) / Max. Units (towers) parallel		2 - 5 / up to 3	4 - 8 / up to 3	2 - 5 / - 2 - 4 / -
Max. charging power System		to be calculated depending on the set / table		depending on the set / table To calculate depending on the set / Table to be taken
Usable capacity (kWh) per unit		5,1 to 12,8	11,0 to 22,1	6,56 to 16,4 10,0 to 20,0
Time window for expansion from commissioning		Unlimited		Up to 1.5 years
Emergency power (separate AC clamp)		<input type="radio"/>		
Battery backup light (backup connection inverter, i.n. transfer switch)		<input checked="" type="radio"/> , backup connection		
Full battery backup (automatic transfer switch)		<input type="radio"/>		
Active PV-modules in backup mode		<input checked="" type="radio"/>		
Interfaces (Heat pump + FRE)		WP via SG Ready contact; Connection FRE via 5 x DI contact		
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times; Dynamic electricity tariffs (via Home Manager 2.0); Limitation by EVU (via Home Manager)		
System information		3-phase DC-coupled hybrid device with additional PV inverter via AC coupling; ShadeFix shadow management		

\*In Germany limited to 4,6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability / Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

Inverter manufacturer

**SOFAR**

<b>Storage inverter type</b>		HYD 5 / 6 / 8 KTL			HYD 10 / 15 / 20 KTL	
<b>Max. PV system size (kWp)</b>		DC: 7,5 to 12,0 AC: without restriction			DC: 15,0 to 30,0 AC: without restriction	
<b>AC phases</b>	1	<input type="radio"/>				
	3	<input checked="" type="radio"/>				
<b>Surge Protection Device DC / AC</b>	Type 2 / Type 2					
<b>Bat.-coupling</b>	AC (Bat.-Inv)	<input checked="" type="radio"/>				
	DC (Hybrid)	<input type="radio"/>				
<b>Bat. charging via separate PV inverter (AC-coupling)</b>	<input checked="" type="radio"/>					
<b>Manufacturer storage</b>	 <b>PYLONTECH</b>		 <b>SOFAR</b>		 <b>-AXITEC</b>	
<b>Storage type</b>	Force-H1 13,5 to 23,6	Force-H2 10,1 to 16,9	Force-H39,7 to 34	BTS-D5 E5 to E20	AXIstorage Li SV1 13,5 to 23,6	AXIstorage Li SV2 6,7 to 16,9
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>	4 - 7 / 6	2 - 5 / 6	2 - 7 / 6	1 - 4 / up to 2 (only HYD 10-20)	4 - 7 / 6	2 - 5 / 6
<b>Max. charging power System</b>	to be calculated depending on the set / table					
<b>Usable capacity (kWh) per unit</b>	13,5 to 23,6	6,7 to 16,9	9,69 to 34,01	4,75 to 19,0	13,5 to 23,6	6,7 to 16,9
<b>Time window for expansion from commissioning</b>	Up to 2 years			Unlimited	Up to 5 years	
<b>Emergency power (separate AC clamp)</b>	<input checked="" type="radio"/> backup connection					
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>	<input checked="" type="radio"/> backup connection					
<b>Full battery backup (automatic transfer switch)</b>	<input type="radio"/>					
<b>Active PV-modules in backup mode</b>	<input checked="" type="radio"/>					
<b>Interfaces (Heat pump + FRE)</b>	Control heat pump possible			Control of heat pump possible; Connection FRE via connection terminals		
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>	Fixed charging times; Dynamic electricity tariffs (via Sofar EMS Box); Limitation by EVU			Fixed charging times; Dynamic electricity tariffs (via Sofar EMS Box); Limitation by EVU		
<b>System information</b>	3-phase DC or AC coupled hybrid device with additional PV inverter via AC coupling; 1 battery connection; up to 10 GerPossible in grid-coupled parallel operation (VDE 4110 is available); in backup mode only 6 devices are possible in parallel; use of hybrid as off-grid system (with / without generator) possible; control for external NA protection possible					

<b>Storage inverter type</b>		HD-WAVE StorEdge RWS SE 2200H / 3000 / 3500H / 3680H / 4000H / 5000H* / 6000H*	RWB Home Hub Inverter*** SE3000H / SE3680H / SE4000H / SE5000H* / SE6000H*
<b>Max. PV system size (kWp)</b>		DC: 3,4 to 7,8 AC: without restriction	DC: 10,0 to 15,0 AC: without restriction
<b>AC phases</b>	1	●	○
	3	○	●
<b>Surge Protection Device DC / AC</b>		- / -	
<b>Bat.-coupling</b>	AC (Bat.-Inv)	●	
	DC (Hybrid)	●	
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		●	
<b>Manufacturer storage</b>		<b>solaredge</b>	<b>solaredge</b>
<b>Storage type</b>		Home Battery HV	Home Battery HV
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		1 / up to 3	1 / up to 3
<b>Max. charging power System</b>		to be calculated depending on the set / table	
<b>Usable capacity (kWh) per unit</b>		9,7	9,7
<b>Time window for expansion from commissioning</b>		Unlimited	Unlimited
<b>Emergency power (separate AC clamp)</b>		○	
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		○	
<b>Full battery backup (automatic transfer switch)</b>		○	● with Home Backup Interface 1P***
<b>Active PV-modules in backup mode</b>		○	●
<b>Interfaces (Heat pump + FRE)</b>		Connection of heat pump via SE Smart Home components; Connection FRE via RPI connections inverter	
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times; dynamic electricity tariffs (with SolarEdge ONE); Limitation by EVU (with the SolarEdge ONE Controller)	
<b>System information</b>		1-phase DC or AC-coupled hybrid device with additional PV inverter via AC coupling	1-phase DC or AC-coupled hybrid device with additional PV inverter via AC coupling; Backup application only possible in 1P networks

\*In Germany limited to 4,6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability /Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

## Inverter manufacturer



Storage inverter type		RWS StorEdge Hybrid 5 / 7 / 8 / 10		RWB48 Home Hub Inverter 5 / 8 / 10	
Max. PV system size (kWp)		DC: 6.5 to 13.5 AC: without restriction		DC: 10.0 to 15.0 AC: without restriction	
AC phases	1			○	
	3			●	
Surge Protection Device DC / AC				- / -	
Bat.-coupling	AC (Bat.-Inv)			●	
	DC (Hybrid)			●	
Bat. charging via separate PV inverter (AC-coupling)				●	
Manufacturer storage					
Storage type		B-Box LVS 4.0 to 24.0	Home Battery LV 4.6 to 23.0	Home Battery LV (W) 4.85 tp 19.4 ***	Home Battery LV 4.6 to 23.0
Number of storages per unit (tower) / Max. Units (towers) parallel		1 - 6 / -	1 - 5 / -	1 - 4 / -	1 - 4 / -
Max. charging power System		to be calculated depending on the set / table	to be calculated depending on the set / table		to be calculated depending on the set / table
Usable capacity (kWh) per unit		4,0 to 24,0	4,85 to 24,25	4,85 to 19,4	4,85 to 24,25
Time window for expansion from commissioning		Unlimited, only 1 tower	Unlimited		Unlimited
Emergency power (separate AC clamp)				○	
Battery backup light (backup connection inverter, i.n. transfer switch)				○	
Full battery backup (automatic transfer switch)				○	● with Home Backup Interface 3P
Active PV-modules in backup mode				○	●
Interfaces (Heat pump + FRE)		Connection of heat pump via SE Smart Home components; Connection FRE via RPI connections inverter			
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times; dynamic electricity tariffs (with SolarEdge ONE); Limitation by EVU (with the SolarEdge ONE Controller)			
System information		3-phase DC or AC coupled hybrid device; Up to 3 devices in parallel operation ***; With additional PV inverter via AC coupling		3-phase DC or AC coupled hybrid device; BIs to 3 devices in parallel operation (only master inverter active in emergency mode) ***, memory from 01.01.25 with 4.85 kWh	

## Inverter manufacturer



Storage inverter type		X3-HYBRID G4.2 (Version D) 5.0-D / 6.0-D / 8.0-D / 10.0-D / 12.0-D / 15.0-D X3-Hybrid-G4 PRO 5.0-P / 6.0-P / 8.0-P / 10.0-P / 12.0-P / 15.0-P						
Max. PV system size (kWp)		DC: 8,0 to 30,0 AC: without restriction						
AC phases	1	<input type="radio"/>						
	3	<input checked="" type="radio"/>						
Surge Protection Device DC / AC		Type 2 / Type 2 (only PRO Version)						
Bat.-coupling	AC (Bat.-Inv)	<input checked="" type="radio"/>						
	DC (Hybrid)	<input checked="" type="radio"/>						
Bat. charging via separate PV inverter (AC-coupling)		<input checked="" type="radio"/>						
Manufacturer storage								
Storage type		T-BAT H 3.0 6.0 / 9.0 / 12.0	T-BAT HV-S 2.5 7.5 bis 32.5	T-BAT HV-S 3.6 7.2 to 46.8	T-BAT-HV-S 5.1 15.3 to 66.5			
Number of storages per unit (tower) / Max. Units (towers) parallel		2 - 4 / -	3 - 13 / -	2 - 13 / -	3 - 13 / 3			
Max. charging power System		to be calculated depending on the set / table						
Usable capacity (kWh) per unit		5,58 to 11,16	6.9 to 29.9	6.5 to 43.1	13,7 to 59,8			
Time window for expansion from commissioning		Up to 1 year	Unlimited					
Emergency power (separate AC clamp)		<input checked="" type="radio"/>						
Battery backup light (backup connection inverter, i.n. transfer switch)		<input checked="" type="radio"/>						
Full battery backup (automatic transfer switch)		<input checked="" type="radio"/>						
Active PV-modules in backup mode		<input checked="" type="radio"/>						
Interfaces (Heat pump + FRE)		Connection HeatPump (via Solax adapter box G2); Connection FRE via Solax Datahub1000						
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a		Fixed charging times; dynamic electricity tariffs; Limitation by EVU (Integrated terminals / data hub)						
System information		X3-Hybrid: each 2 MPPT + 1 Bat connection; X3-Hybrid-G4 Pro: depending on the performance class, up to 3 MPPT + 2 Bat connections; 3-phase DC or AC-coupled storage system with additional PV inverter via AC coupling; Use of hybrid as offgrid system (with / without generator) possible; Hybrid up to 10 devices in parallel mode (for backup operation X3-EPS Parallel Box notwendig, only same inverter power classes and battery sizes, EPS outputs synchronized)						

\*In Germany limited to 4.6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability / Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

## Inverter manufacturer



<b>Storage inverter type</b>		X3-IES compact system 5K / 6K / 8LK / 10K / 12K / 12K		X3-Ultra Hybrid 15K / 19.9K / 20K / 25K / 30K	
<b>Max. PV system size (kWp)</b>		DC: 10.0 to 30.0 AC: without restriction		DC: 30.0 to 60.0 kWp AC: without restriction	
<b>AC phases</b>	1	○		○	
	3	●		●	
<b>Surge Protection Device DC / AC</b>		Type 2 / Type 2			
<b>Bat.-coupling</b>	AC (Bat.-Inv)	●		●	
	DC (Hybrid)	●		●	
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		●		●	
<b>Manufacturer storage</b>		<b>SOLAX POWER</b>		<b>SOLAX POWER</b>	
<b>Storage type</b>		T-BAT HV-S 2.5 7.5 to 32.5	T-BAT-HS50E 10.2 to 30.6	T-BAT HV-S 2.5 7.5 to 32.5	T-BAT HV-S 3.6 7.2 to 46.8
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		3 - 13 / 3	3 - 6 / -	3 - 13 / 2	2 - 13 / -
<b>Max. charging power System</b>		To be calculated depending on the set / Table		to be calculated depending on the set / table	
<b>Usable capacity (kWh) per unit</b>		6.9 to 29.9	9.2 to 27.6	6.9 to 29.9	6.5 to 43.1
<b>Time window for expansion from commissioning</b>		Unlimited		Unlimited	
<b>Emergency power (separate AC clamp)</b>		●		●	
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		●		●	
<b>Full battery backup (automatic transfer switch)</b>		●, with Solax X3-Matebox G2		●, with Solax X3-EPS Parallel Box	
<b>Active PV-modules in backup mode</b>		●		●	
<b>Interfaces (Heat pump + FRE)</b>		Connection WP (via Solax Adapterbox G2); Connection FRE via 5 x DI		Connection WP (via Solax Adapterbox G2); Connection FRE via 5 x DI	
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times; dynamic electricity tariffs; Limitation by EVU (Integrated terminals / data hub)		Fixed charging times; dynamic electricity tariffs; Limitation by EVU (Integrated terminals / data hub)	
<b>System information</b>		3-Phase DC coupled storage system; Use of hybrid as offgrid system (with / without generator) possible; probably up to 10 devices in parallel operation; Execution 15K - 20K With 2 MPPT and 2 x battery; 25K + 30K with 3 MPPT and 2 x battery connection; When using both battery connections the same capacity (tower height) mandatory!			

Inverter manufacturer

**SUNGROW**  
Clean power for all

<b>Storage inverter type</b>		SH 5.0 / 6.0 / 8.0 / 10.0 RT-20					
<b>Max. PV system size (kWp)</b>		DC: 5,0 to 15,0 AC: without restriction					
<b>AC phases</b>	1	<input type="radio"/>					
	3	<input checked="" type="radio"/>					
<b>Surge Protection Device DC / AC</b>		Type 2 / Type 2					
<b>Bat.-coupling</b>	AC (Bat.-Inv)	<input checked="" type="radio"/>					
	DC (Hybrid)	<input checked="" type="radio"/>					
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		<input checked="" type="radio"/>					
<b>Manufacturer storage</b>							
<b>Storage type</b>		B-Box HVS 5.1 to 12.8	B-Box HVM 11.0 to 22.1	Force-H1 13.5 to 23.6	Force-H2 6.7 to 16.9		
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		2 - 5 / up to 3	4 - 8 / up to 3	4 - 7 / 6	2 - 5 / 6		
<b>Max. charging power System</b>		to be calculated depending on the set / table					
<b>Usable capacity (kWh) per unit</b>		5,1 to 12,8	11,0 to 22,1	13,5 to 23,6	6,7 to 16,9		
<b>Time window for expansion from commissioning</b>		Unlimited		Up to 2 years			
<b>Emergency power (separate AC clamp)</b>		<input checked="" type="radio"/>					
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		<input checked="" type="radio"/>					
<b>Full battery backup (automatic transfer switch)</b>		<input type="radio"/>					
<b>Active PV-modules in backup mode</b>		<input checked="" type="radio"/>					
<b>Interfaces (Heat pump + FRE)</b>		Connection heat pump via D0 contact; Connection FRE via 4 x DI contact					
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times, dynamic electricity tariffs (announced - via iHomeManager) Limitation by EVU (via integrated control contact)					
<b>System information</b>		3-phase DC-coupled storage system with additional PV inverter via AC coupling; Up to 2 devices in parallel operation; (observe the requirements for FRE connection and network and system protection in DE; Only the same inverter performance classes possible)					

\*In Germany limited to 4.6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability / Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

<b>Storage inverter type</b>		SH 5.0 / 6.0 / 8.0 / 10.0 RT		SH 15 / 20 / 25 T			
<b>Max. PV system size (kWp)</b>		DC: 5,0 to 15,0 AC: without restriction		DC: 30,0 to 50,0 AC: without restriction			
<b>AC phases</b>	1			<input type="radio"/>			
	3			<input checked="" type="radio"/>			
<b>Surge Protection Device DC / AC</b>		Type 2 / Type 2					
<b>Bat.-coupling</b>	AC (Bat.-Inv)			<input checked="" type="radio"/>			
	DC (Hybrid)			<input checked="" type="radio"/>			
<b>Bat. charging via separate PV inverter (AC-coupling)</b>							
<b>Manufacturer storage</b>		<b>-AXITEC</b>	<b>SUNGROW</b> Clean power for all	<b>SUNGROW</b> Clean power for all			
<b>Storage type</b>		AXIstorage Li SV1 13,5 to 23,6	AXIstorage Li SV2 6,7 to 13,5	SBR (with RT Serie) 064*** / 096 / 128 / 160 / 192 / 224 / 256	SBH (RT + T Serie) 100 / 150 / 200 / 250 / 300 / 350 / 400 SBR (with T Serie) 128 / 160 / 192 / 224 / 256		
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		4 - 7 / 6	2 - 5 / 6	2 - 8 / -	2 - 8 / bis 2 4 - 8 / -		
<b>Max. charging power System</b>		to be calculated depending on the set / table		depending on the set / table			
<b>Usable capacity (kWh) per unit</b>		13,5 to 23,6	6,7 to 16,9	6,4 to 25,6	10,0 to 40,0 12,8 to 25,6		
<b>Time window for expansion from commissioning</b>		Up to 5 years		Unlimited	Unlimited Unlimited		
<b>Emergency power (separate AC clamp)</b>		<input checked="" type="radio"/> backup connection (can only be used separately per device in parallel operation)					
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		<input checked="" type="radio"/> backup connection (can only be used separately per device in parallel operation)		<input checked="" type="radio"/> backup connection (Compl. Domestic load up to 43 kW)			
<b>Full battery backup (automatic transfer switch)</b>		<input type="radio"/>					
<b>Active PV-modules in backup mode</b>		<input checked="" type="radio"/>					
<b>Interfaces (Heat pump + FRE)</b>		Connection heat pump via D0 contact; Connection FRE via 4 x DI contact		Connection heat pump via D0 contact; Connection FRE via 4 x DI contact			
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		Fixed charging times, dynamic electricity tariffs (announced - via iHomeManager) Limitation by EVU (via integrated control contact)		Fixed charging times, dynamic electricity tariffs (Announced - via iHomeManager); Limitation by EVU (Via integrated control contact)			
<b>System information</b>		3-phase DC-coupled storage system with additional PV inverter via AC coupling; Up to 2 devices in parallel operation; (observe the requirements for FRE connection and network and system protection in DE; Only the same inverter performance classes possible)		3-phase DC-coupled storage system with additional PV inverters via AC coupling (up to 5 WR of the CX series); Up to 4 devices in parallel operation; (Observe the requirements for FRE connection and network and system protection in DE; Only the same inverter performance classes possible)			

<b>Storage inverter type</b>		SunESS SW 8 / 10 / 12 / 15 KH3UT
<b>Max. PV system size (kWp)</b>		DC: 12.0 to 22.5 AC: without restriction
<b>AC phases</b>	1	<input type="radio"/>
	3	<input checked="" type="radio"/>
<b>Surge Protection Device DC / AC</b>		Type 2 / Type 2
<b>Bat.-coupling</b>	AC (Bat.-Inv)	<input type="radio"/>
	DC (Hybrid)	<input checked="" type="radio"/>
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		<input type="radio"/>
<b>Manufacturer storage</b>		
<b>Storage type</b>		SunESS 5.0 / 10.0 / 15.0 / 20.0 / 25.0 / 30.0 / 35.0 / 40.0
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>		1 - 8 / -
<b>Max. charging power System</b>		to be calculated depending on the set / table
<b>Usable capacity (kWh) per unit</b>		5,0 to 40,0
<b>Time window for expansion from commissioning</b>		Unlimited
<b>Emergency power (separate AC clamp)</b>		<input checked="" type="radio"/>
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>		<input checked="" type="radio"/>
<b>Full battery backup (automatic transfer switch)</b>		<input type="radio"/>
<b>Active PV-modules in backup mode</b>		<input checked="" type="radio"/>
<b>Interfaces (Heat pump + FRE)</b>		Heat pump connection via DRM contact; FRE connection via 4 x DRM contacts
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>		k.A.
<b>System information</b>		3-phase hybrid device with additional PV inverter via AC coupling; must always be installed as a complete system including storage; currently no cascading approved

\*In Germany limited to 4.6 kW in single-phase operation (VDE-AR-N 4105) // \*\*With suitable PV inverter // \*\*\*Availability / Release according to manufacturer's specification // All information without guarantee and subject to reservation according to manufacturer's approval.

Please note the instructions at the end of the document.

Inverter manufacturer



<b>Storage inverter type</b>	Pulse neo 6	Element Backup
<b>Max. PV system size (kWp)</b>		AC: without restriction
<b>AC phases</b>	1	<input checked="" type="radio"/>
	3	<input type="radio"/>
<b>Surge Protection Device DC / AC</b>		-/-
<b>Bat.-coupling</b>	AC (Bat.-Inv)	<input checked="" type="radio"/>
	DC (Hybrid)	<input type="radio"/>
<b>Bat. charging via separate PV inverter (AC-coupling)</b>		<input checked="" type="radio"/>
<b>Manufacturer storage</b>	<b>VARTA</b>	
<b>Storage type</b>	Pulse neo	Element 6 / 12 / 18
<b>Number of storages per unit (tower) / Max. Units (towers) parallel</b>	1 / -	1 - 3 / -
<b>Max. charging power System</b>	To be calculated depending on the set / Table to be found	
<b>Usable capacity (kWh) per unit</b>	5,9	5.9 / 11.7 / 17.7
<b>Time window for expansion from commissioning</b>	-	Unlimited
<b>Emergency power (separate AC clamp)</b>	<input type="radio"/>	<input checked="" type="radio"/> , backup connection / box (only active on the master device)
<b>Battery backup light (backup connection inverter, i.n. transfer switch)</b>	<input type="radio"/>	<input checked="" type="radio"/> , backup connection / box (only active on the master device)
<b>Full battery backup (automatic transfer switch)</b>	<input type="radio"/>	<input type="radio"/>
<b>Active PV-modules in backup mode</b>		<input type="radio"/>
<b>Interfaces (Heat pump + FRE)</b>	AnbiHeat pump via external relay control	
<b>SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limitation by EVU according to EnWG §14a</b>	Fixed charging times	
<b>System information</b>	1-/3-phase AC-coupled storage system; Ideal for storage retrofitting in existing systems; Up to 5 devices can be cascaded with Varta Link	

Explanation of The specifications	Description
Storage inverter type	Name inverter series and power classes
Max. PV system size (kWp)	DC System size according to manufacturer's specifications *
AC phases	1
	3
Surge Protection Device DC/AC	Specification of integrated overvoltage protection, if applicable also as an additional option
Bat.-coupling	AC (Bat.-Inv)
	DC (Hybrid)
Bat. charging via separate PV inverter (AC-coupling)	Use of a second inverter (same or different manufacturer) for charging the battery storage via AC coupling
Manufacturer storage	Manufacturer storage
Storage type	Name storage types (Compatible variants) Battery sets compatible with this storage system
Number of storages per unit (tower) / Max. Units (towers) parallel	Number of battery modules in individual setups / max. parallel setups
Max. charging power Sys- tem	maximum charge / discharge power in the respective unit combination *
Usable capacity (kWh) per unit	Usable capacity according to storage manufacturer *
Time window for expansion from commissioning	Possibility of a battery expansion as well as the time window for this from the time of commissioning
Emergency power (separate AC clamp)	Definition: Separate clamp at inverter for external socket(s), which is fed from battery and if possible by solar power.
Battery backup light (backup connection inverter, i.n. transfer switch)	Definition: direct supply of few defined circuits via backup connection at the inverter, if necessary also with switching by backup box (no complete house load)
Full battery backup (automatic transfer switch)	Definition: by means of automatic transfer switch in central main line (according to local regulations) supply of all/defined circuits takes place
Active PV-modules in backup mode	Recharge option in case of grid failure
Interfaces (Heat pump + FRE)	Information on interfaces for heat pumps and FRE cell chemistry
SMART Charging Features Dynamic electricity tariffs, fixed charging times, Limi- tation by EVU according to EnWG §14a	Additional charging modes of the storage system (in addition to PV surplus) with fixed charging times or via external control based on stock market prices, energy supply company specifications, etc.
System information	Additional information on the products

\* The respective columns for the appliance series contain different performance classes, therefore all information refers to the smallest and largest appliance in each case, as well as a storage tower/unit. Detailed information can be found in the data sheet.



**Krannich Solar GmbH & Co. KG**  
Heimsheimer Str. 65/1  
71263 Weil der Stadt / Hausen  
Germany

Tel. +49 (0) 7033 3042 0  
[info@de.krannich-solar.com](mailto:info@de.krannich-solar.com)